




With the vent removed from the vehicle and its surrounding trim, unclip the rear vent tube and remove the rotating vent carriage from the frame.



Disassemble the vent slat carriage by sliding out the frame from the rear using a small flathead screwdriver to pry it out and release any clips.

Trim the vent slat carriage TOP SECTION 1 mm below the wording to match the height of the gauge display.

Trim the slat connector above the 3rd connection to release the top 2 slats.

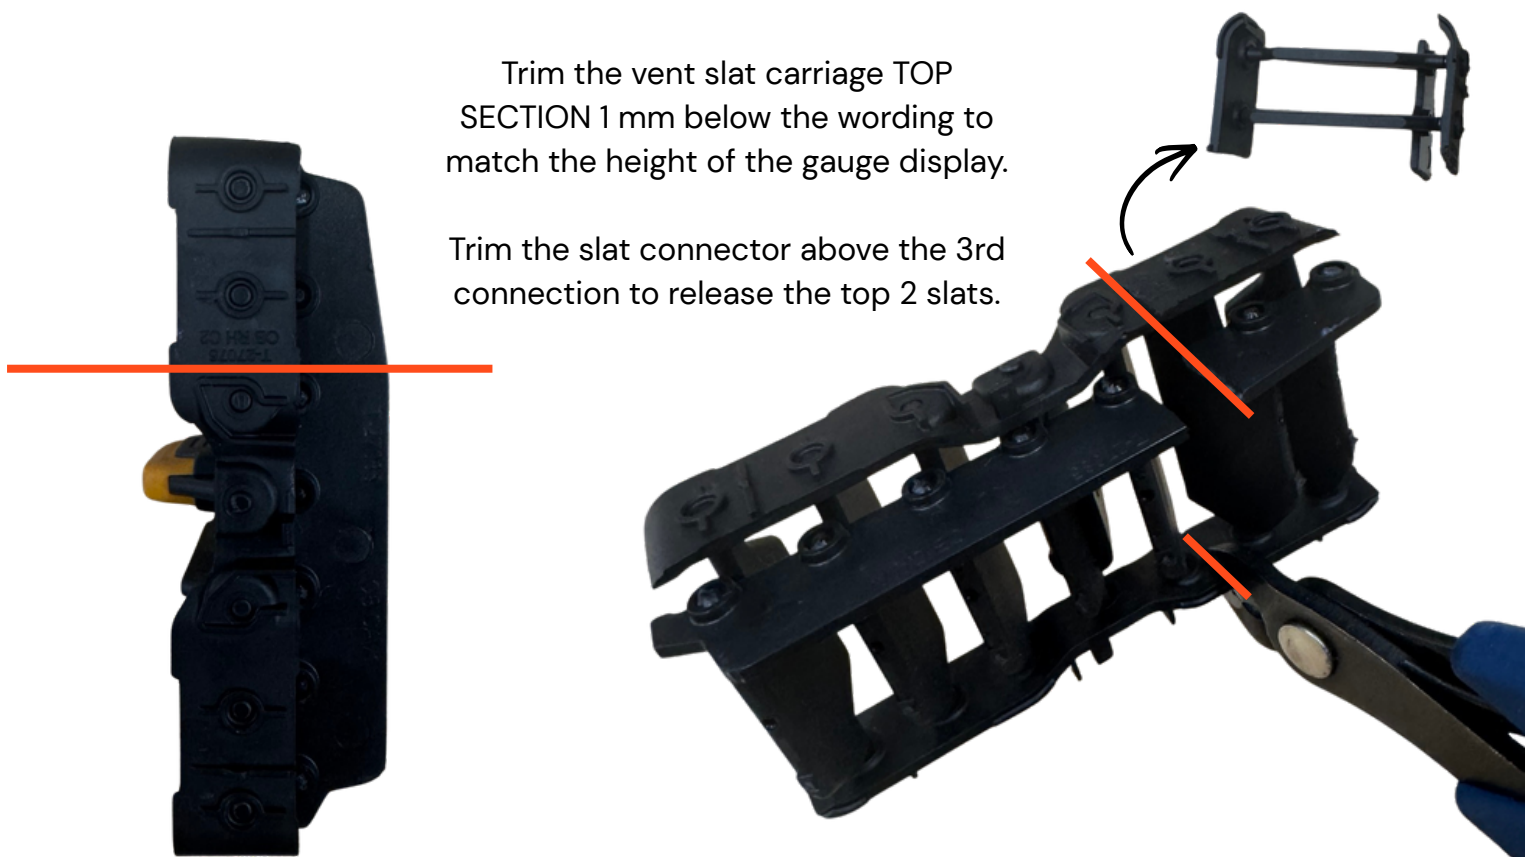

Fit the gauge display into the top of the vent carriage and re-install the trimmed lower portion of the slats.

If you didn't trim enough of the slat holder sides, you can trim a bit more until it fits cleanly.



Feed the display cable out the middle open area as you reinstall the REAR of the vent carriage holder.



Re-install the rubber holders and install them back into the frame—BOTTOM RUBBER SLOT FIRST, then the top will slide and click in.



Make sure the display cable exits the LEFT side of the vent, and the open/close function is retained.



Leave enough slack when securing the cable to make sure the vent carriage can rotate fully left and right.

Done!

Re-install vent into the vehicle.

